STEP-BY-STEP CARE FOR YOUR CLIPPERS & TRIMMERS.

Step 1: Clean Blade Brush Item #12415 Remove large hair fragments from the blade wth a blade brush.



Step 2: Disinfect Cool Care Plus*

Item #12750 Use this 5-in-one formula on your blades after every use and during extended clipping to cool, disinfect, lubricate, clean and prevent rust.



HOW: Hold the clipper or trimmer with the blade facing towards the floor. Turn the tool on and spray the blade from 6" away with Cool Care Plus. Spray the front and back of the blade. Turn off tool and wipe off excess spray with a clean cloth.

Blade Care Plus*

Item #12590 (Bottle)
Item #12570 (Jar)
Wash away hair, buildup
and preservatives that
accumulate on blades
using this Vitamin E
enriched formula. Works
as a coolant, deodorizer,
lubricant, cleaner and
rust preventative.



HOW: Turn off clipper or trimmer and pour approximately 1/8"-1/4" of Blade Care Plus into the lid or shallow pan. Dip blade only into solution for 10 seconds. Remove and wipe off excess with a clean cloth.

TIP: Blades should be thoroughly disinfected at the end of every day.

Step 3: Oil

Clipper Oil Item #12108
Use Andis Clipper Oil to
lubricate and clean blades.
Blades should be oiled
between every cut to maximize
the performance of your tool.



HOW: With the tool running, place 3 drops of oil across the

teeth of the blade and 1 drop on each back rail. Turn off the clipper or trimmer and blot excess with a clean, dry cloth.

Step 4: Blade Drive

Item #20659 (compatible with select clipper models)
If your blades don't seem to cut like they used to, or your clipper appears to drag, it's a sign you may need to replace your blade drive.



HOW: Turn off clipper and snap off the detachable blade.

Slide off blade drive cap. Remove screws with a Phillips screwdriver and lift out drive assembly. Insert new blade drive and reverse steps to complete.

Let Andis' show you how to maintain your tools with our informational step-by-step videos at andis.com.

