

STEP-BY-STEP CARE FOR YOUR CLIPPERS & TRIMMERS.

Step 1: Clean

Blade Brush Item #12415

Remove large hair fragments from the blade with a blade brush.



Step 2: Disinfect

Cool Care Plus®

Item #12750

Use this 5-in-one formula on your blades after every use and during extended clipping to cool, disinfect, lubricate, clean and prevent rust.



HOW: Hold the clipper or trimmer with the blade facing towards the floor. Turn the tool on and spray the blade from 6" away with Cool Care Plus. Spray the front and back of the blade. Turn off tool and wipe off excess spray with a clean cloth.

Blade Care Plus®

Item #12590 (Bottle)

Item #12570 (Jar)

Wash away hair, buildup and preservatives that accumulate on blades using this Vitamin E enriched formula. Works as a coolant, deodorizer, lubricant, cleaner and rust preventative.



HOW: Turn off clipper or trimmer and pour approximately 1/8"-1/4" of Blade Care Plus into the lid or shallow pan. Dip blade only into solution for 10 seconds. Remove and wipe off excess with a clean cloth.

TIP: Blades should be thoroughly disinfected at the end of every day.

Step 3: Oil

Clipper Oil Item #12108

Use Andis Clipper Oil to lubricate and clean blades. Blades should be oiled between every cut to maximize the performance of your tool.



HOW: With the tool running, place 3 drops of oil across the teeth of the blade and 1 drop on each back rail. Turn off the clipper or trimmer and blot excess with a clean, dry cloth.

Step 4: Blade Drive

Item #20659 (compatible with select clipper models)

If your blades don't seem to cut like they used to, or your clipper appears to drag, it's a sign you may need to replace your blade drive.



HOW: Turn off clipper and snap off the detachable blade. Slide off blade drive cap. Remove screws with a Phillips screwdriver and lift out drive assembly. Insert new blade drive and reverse steps to complete.

Let Andis® show you how to maintain your tools with our informational step-by-step videos at andis.com.